

OVERVIEW & REQUIREMENTS

This guide walks through configuring the **Fanvil H3** IP phone to register with **the PBX platform v4.1** — from installation through manual configuration, auto provisioning (DHCP, TFTP, HTTP/HTTPS), and BLF setup.



Fanvil H3 IP phone

BEFORE YOU BEGIN

- **Phone model** — Confirm the exact model on the back of the phone
- **Firmware** — Check via the phone's web interface status page
- **DHCP** — A fully configured, operational DHCP server
- **PBX version** — Release **4.1.3.0**

CHECK PHONE FIRMWARE

- 1 Browse to the phone's IP, e.g. `http://192.168.1.22`
- 2 Log in (factory default: `admin / admin`)
- 3 The firmware version is displayed on the status page

FIND PHONE IP ADDRESS

- 1 On the phone display, navigate to **Menu** > **Status**
- 2 The IP address is shown on the screen

CHECK PBX VERSION

- 1 Log in to the PBX platform, navigate to **Settings** > **About**

```
Edition: Business, Release: 4.1.3.0  
(387597b7), Running: 1.8.32.1-gc-b47edc45,  
Proxy v4.1.3 (62b7bcd), API: 4.1
```

INSTALLATION

OPTION A — POWER ADAPTER

- 1 Connect the DC plug on the power adapter to the DC port on the phone, and the other end into an electrical outlet
- 2 Connect an Ethernet cable between the **Internet** port on the phone and a network port on your router or switch

NOTE: If using PoE, you do not need the AC adapter. Ensure the Ethernet cable and router/switch are PoE compliant.

OPTION B — POWER OVER ETHERNET (POE)

- 1 Connect an Ethernet cable between the **Internet** port on the phone and an available port on a PoE-compliant router or switch

RESET TO FACTORY SETTINGS

Not required for brand-new phones — but a **must** for any phone previously used.

- 1 Long-press the phone's reset button (pinhole on the back), or use the web interface factory reset option
- 2 Allow time for the phone to reboot

WARNING: Do not unplug or remove power while the phone is updating firmware or configuration.

MANUAL CONFIGURATION — UAD SETTINGS

- 1 Browse to the PBX platform, e.g. <http://192.168.1.10>, and log in
- 2 Navigate to **Settings > UAD**
- 3 Click the **Edit** icon for the Fanvil H3
- 4 Set **Status** = **Active**, **Auto provisioning** = **No**, **DHCP** = **Yes**
- 5 Click **Save**

The screenshot shows the 'Device > Yealink T22P' configuration page. Under the 'General' tab, the 'Status' dropdown is set to 'Active'. The 'Internal UAD name for Auto-Provisioning' is set to 'cisco504g'. In the 'Codecs' section, 'G.711 µlaw' and 'G.711 alaw' are selected. Under 'Auto Provisioning', 'Auto provisioning' is set to 'No' and 'DHCP' is set to 'Yes'. The 'Save' button is highlighted with a green checkmark.

UAD settings — manual configuration

MANUAL CONFIGURATION — EXTENSION & REGISTRATION

CREATE THE EXTENSION

- 1 **Extensions** > **Add Extension** > UAD = Fanvil H3,
Location = Local or Remote > **Next step**

REQUIRED EXTENSION FIELDS

- **Name** — e.g. John Smith
- **E-mail** — e.g. john.smith@yourdomain.com

Click **Save**.

REGISTER THE PHONE

- 1 Browse to the phone's IP, log in (`admin / admin`)
- 2 Click **Line** in the left navigation menu
- 3 **Username** — the Extension number, e.g. `1003`
- 4 **Authentication Name** — usually the same as the Extension number
- 5 **Authentication Password** — the extension Secret, e.g. `_%Z4M3*Ts9y7`
- 6 **Activate** — check the box
- 7 **SIP Proxy Server Address** — PBX hostname or IP, e.g. `voip.yourdomain.com` or `192.168.1.10`
- 8 Click **Apply**. Dial `*123` to verify.

AUTO PROVISIONING

1 UAD SETTINGS

- 1 Log in to the PBX platform, navigate to **Settings > UAD**
- 2 Click **Edit** for the Fanvil H3, set **Status** = **Active**, **Auto provisioning** = **Yes**, **DHCP** = **Yes**, click **Save**

UAD settings — auto provisioning

2 CREATE THE EXTENSION

- 1 **Extensions** > **Add Extension** > UAD = Fanvil H3,
Location = Local or Remote > **Next step**

REQUIRED EXTENSION FIELDS

- **Name** — e.g. John Smith
- **E-mail** — e.g. john.smith@yourdomain.com
- **Auto Provisioning** — set to **Yes**
- **MAC Address** — from the back of the phone

Click **Save**.

Creating the extension with auto provisioning

3A REGISTER VIA DHCP (OPTION 66)

- 1 Configure your DHCP router to use **option 66**. On first boot or reboot, the phone picks up its configuration automatically. Dial ***123** to verify.

3B REGISTER VIA TFTP, HTTP, OR HTTPS

- 1 Browse to the phone's IP, log in (**admin** / **admin**)
- 2 Click **Auto Provision** in the navigation tab
- 3 Enter auto-provisioning credentials in **Authentication Name** and **Authentication Password**
- 4 Make sure **Download CommonConfig enabled** is **NOT** selected
- 5 Click **Static Provisioning Server**
- 6 Select **Protocol Type**: HTTP, HTTPS, or Trivial FTP (HTTP recommended)
- 7 Enter the server address (see formats below)
- 8 Set **Update Mode** to **Update After Reboot**
- 9 Click **Apply**, then reboot the phone
- 10 Wait for configuration to update. Dial ***123** to verify.

SERVER ADDRESS FORMATS

- **HTTP / HTTPS** — **abc.yourdomain.com/prov** or **192.168.1.10/prov**
- **TFTP** — **voip.yourdomain.com** or **192.168.1.10**

Do **not** include the protocol prefix — the **Protocol Type** dropdown handles this.